

Important hints for installation and operation

Use selflimiting heating tapes in accordance to your application and within the operation data of Quintex .

Inappropriate installation or damage of the heating tape can lead to a short circuit or to a failure of the system

Selflimiting heating tapes shall protected by a RCDS with a switch off current <= 30mA by general

All circuit breaker must have a characteristic called C

Never connect the two parallel current leading wires together; this will cause a short circuit!

The carbon black heating element of the uninstalled heating circuit must be protected against environmental attacks especially against moisture. It is recommended to install the connection set immediately to protect the core material

Minimal working temperature: -25℃

Use only original connection sets and accessories of Quintex for use with the heating tapes.

Do not use PVC/VC tapes or material (with plastizer) to fix the heating tapes.

Pay attention to your nation installation requiremnts

The insulation thickness of pipes must be thick enough to reduce heat losses or shall be in accordance to the heat loss calculation

Follow the installation manuals of all materials exactly. It is a duty to fill out the inspection document to fulfil warranty requirements.

Temperature controller and all safety equipment must be maintained on a regular basis to test setpoints and functions (minmium once a year)

How to stock on site

After getting the material inspect it directly for transportation damages

Heatingtaoe s must stocked clean and dryn.

Avoid contact to any chemical substance in the stock



In a moisture environment the heating tapes must be protected effectually against moisture(install connection set)

stock temperature

min. - 40° C

max. + 60° C

Preparation of installation

Check the availability of all materials and necessary tools on site

Inspect the pipe you will install the heating element on. Roughness and sharp edge deburr.

Painted pipe must be dry before installation

Installation of heating tape

Installation on a pipe

Heating tape must be unspooled like shown below

Heating never knick, squeeze or strip it over sharp edges



This is

ok Thi**s**




is wrong!

Quintex GmbH, 97922 Lauda-Königshofen, i_Park Tauberfranken 13, Tel.09343/6130-0, Fax 09343/6130-105, www.quintex.info, info@quintex.info



Installation of one or more layers:



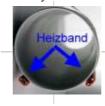





Exception: maintain temperatures of fat contenting pipes

Here the tapes must placed upper side of the pipe!





Tabelle 1 Befestigungsarten und zugehöriges Material

| Decriptiom | QUINTEX TYPE | Copper/steel pipes | Platic paipes | Gcast pipe Stainless steel | Speciall heating pipes |
|-----------------|--------------|--------------------|---------------|-------------------------------|------------------------|
| Textile tapes | GWK | Х | | | |
| Polyester tapes | PEK | Х | | | |
| Glasfibre tapes | GSK | x | | | х |
| Aluminium tapes | ALK | x | х | Х | х |

^{*}At plastic pipes we recommend the use of aluminium tapes under! The heating tape to get a better hat transfer to the pipe

For stell or copper pipes use polyester tapes, textile tapes or wire straps

For temperature > 60℃ use glafibre tapes



Fix the heating tapes along the pipe in a distance of 20 cm Use only QUINTEX fixing materials (see table 1)



For plastic, cast and stainless steel pipes use aluminium tapes(ALK)

At plastic tape use aluminium tape also under the heating tape to increase heat transfer



Quintex GmbH, 97922 Lauda-Königshofen, i_Park Tauberfranken 13, Tel.09343/6130-0, Fax 09343/6130-105, www.quintex.info, info@quintex.info



Insualtion thickness

Before installation of the insulation inspect the heating circuit for ficntion or damage

A good and professional installation of the insulation is a precondition of proper function system

The insulation must be in accordance to your national requirements

If you use a weather cladding of the insulation, the use of insulation through feed is important to protect the outer sheath of the heating tape or the power cable

Mark the heating system outside the insulation in a distance of 3m with warning labels 'electrical heated'